

Gel Cutting Device & Cutting Board

The Gel Cutting Device & Cutting Board are designed to provide efficient and uniform portioning of ClearH₂O® hydration supplement gels for poultry.



Convenient Packaging



Cutting Board




Plunger



Uniform Gel Cubes

Clearly Better Preparation

- ✓ Designed specifically for portioning HydroGel™ 95 & DietGel® for hydration supplementation.
- ✓ Durable construction—made of stainless steel and food grade polymer components.
- ✓ Easy to clean or sterilize.
- ✓ Produces 49 – 1" Gel Cubes (approx. 20.8g each) or 196 – ½" Gel Cubes (approx. 5.2g each) per 1020 gram gel square with interchangeable blades.
- ✓ Convenient and efficient—processing 4 gel squares in one step.

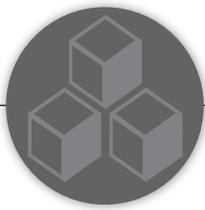

Gel Cutting Device & Cutting Board

Portioning with Gel Cutting Device & Cutting Board



1 Set up the Gel Cutting Device on the Cutting Board placed over a bucket or storage container.



2 Using a Pouchmate opener, slice the pouch open and remove the gel square.



3 Place up to four gel squares into the Gel Cutting Device hopper.



4 With the Gel Cutting Device plunger, push the gel squares through the blade assembly.



Ordering Information

Gel Cutting Device & Cutting Board - 90-04

Portioning Table

Grams / Pouch	1020	1" Gel Cubes	Cubes / Pouch	49	1/2" Gel Cubes	Chicks / Chick Box	196	Chick Boxes / Pouch	12.25
Pouches / Case	15		Grams / Cube	20.8		Grams / Cube	5.2	Chick Boxes / Case	184
Cases / Pallet	56		Cubes / Chick Box of 100	4		Cubes / Chick Box of 100	16	Chick Boxes / Pallet	10,290

ClearH₂O®

Company Information

ClearH₂O® is committed to providing products that improve the welfare and productivity of poultry. We offer poultry breeders and producers gel products that support the optimum delivery of hydration, nutrients, biologics and therapeutic ingredients to chicks and poults. Our proprietary product formulations and manufacturing process results in unsurpassed product consistency and convenience.

www.clearh2o.com